INSULATION TRANSDUCER FOR NON-GROUNDED AC NETWORKS



Direct connection up to 690V line voltage, up to 6,6kV with HV adapter for both single or three phase systems

MCM163x

- Monitoring during both live and standby conditions
- For use in land, marine, offshore, sub-sea and ocean floor Installations
- Complies with IMCA D 045 Code of Practice
- "Megger" safe to 1.4kVDC when aux power is OFF
- Immune to earth capacitance and voltage surges
- Analogue output proportional to meter reading
- Optional slave indicator

Specifications

Auxiliary Supply:	100-120, 200-240, 380-415 or 440-460VAC, 40-70Hz (Fuse 0.5A)
Optional Voltage:	12-24, 48 or 110VDC (Fuse 2A)
Supply tolerance:	± 10%
Power rating:	1,5VA
Analogue Output:	Up to 20mA, max 500R Up to 10V, min 100kohm (other on request)
Temperature:	-20 to +70°C
Weight:	0.5kgs
Front protection:	IP21

The Ultra-Reliability Concept (Paralleling of Transducers)

To obtain ultimate operational safety multiple MCM163x transducer inputs and outputs can be permanently paralleled.

At any time only ONE transducer should be enabled. The selected transducer is activated by applying auxiliary power to unit. Accidental enabling of more than one transducer will give distorted reading, but will not harm the transducer.

The MCM163x range is designed to comply with specification IMCA D 045 "Code of Practice for the Safe Use of Electricity Under Water" issued by IMCA.

The unit meets IEC60092-504 and the relevant environmental and EMC tests specified in IEC60068/60092 and IEC61000/60533 respectively, to comply with the requirements of the major Classification Societies.

Application

The digitally controlled MCM163x series monitors insulation level between a non-grounded (IT) AC mains and its protective earth, regardless of whether the mains is live or non-live (standby).

An AC or DC auxiliary voltage is required for the unit, if powered from a separate source the network can also be monitored during standby conditions. Only **ONE** MCM163x can be connected to each IT-system. The optional slave indicator give at a glance the clear safety message:

- ALARM (red zone) - WARNING (yellow zone) - HEALTHY (green zone)



General

IDV MEASURING PRINCIPLE

Insulation is measured between the complete galvanically interconnected AC network and its protective earth. The unit injects a DC voltage signal into the monitored system. The signal flows to ground via the path of the insulation fault, the level of flow indicates the insulation resistance. The measuring accuracy is not influenced by any normal kind of load attached to the AC network.

MEGGER SAFE

When auxiliary power is **OFF** the unit input is automatically protected against "megger" test voltages up to 1.4kVDC, and incorrect measurements caused by the unit's input impedance are avoided.

OUTPUTS

The unit is supplied with an isolated **analogue output** proportional to insulation level. If output is used for remote meter reading, we recommend 0-1mA for the slave indicator.

SAFETY

When a voltage adapter (CHx or ANx) is used the signal to terminals 4 and 6 on MCM163x is limited to a safe level, avoiding any dangerous voltage exposure to personnel.

Norway Denmark <u>Unit</u>ed Kingdom



REF: Datasheet.MCM163x - REV: 1.05/06.2023 © All rights reserved to Megacon Megacon reserves the right to make any changes to the information at any time

www.megacon.com

INSULATION TRANSDUCER FOR NON-GROUNDED AC NETWORKS

MCM163x

Description

MCM163F

Scale range: $0-10M\Omega - \infty$ (>60M Ω)


This unit is used for marine, ROV and offshore installations. Start of monitoring function is delayed when auxiliary power is switched on (default 10 secs delay).

(Recommended for thruster standby monitoring)

Direct connection up to 690V line voltage. Up to 6,6kV via HV adaptor CH163Bx or AN6,6B series.

Coloured sectors show recommended areas of settings: - Indicates alarm trip zone - Indicates warning trip zone - Indicates healthy zone


Output diagram

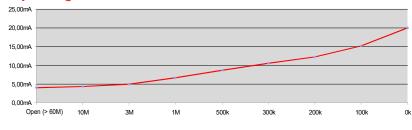

Output table (example for 4-20mA)

Value (scale) mA output 0kΩ 20.00mA 15.18mA 100kΩ 200kΩ 12.30mA 300kΩ 10.59mA 500kΩ 8.67mA 1000kΩ 6.69mA 3MΩ 4.98mA 10MΩ 4.28mA Open (>60MΩ 4.00mA

Range (slave indicator)



High Voltage Adaptors up to 6,6kVAC for MCM163x series

- HV Adaptor for AC Insulation Guards
- CH163Bx series, up to 5000V Line Voltage live or non-live (standby)
- AN6,6B up to 6600V System Voltage live or non-live (Starpoint/Neutral connection only)
- Creates safety barrier from live HT network to LV switchboard
- Limits measuring output signal to safe levels
- No restrictions on distance between adapter and LV switchboard

Voltage Adaptors CH163Bx and AN6,6B series are used for Insulation Guard MCM163x when the monitored line voltage is higher than 690VAC. These adapters are a passive low-pass filter for use in 50, 60 or 400Hz networks, and are potted in polyurethane.

These units includes high inductance reactance modules, connected in a special configuration to avoid DC saturation. These adapters maintain a high AC suppression of its signal output to very low, safe levels, under all conditions.

Caution

Terminal 1 must be disconnected during "megger" test.



CH163/1,4 up to 1.4kVAC

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication



CH163B/3,6 up to 3.6kVAC



CH163B/5 up to 5kVAC



AN6,6B up to 6,6kVAC



Page: 2 of

Norway Denmark United Kingdom




www.megacon.com ECTRONIC CONTRO AND INSTRUMENTATION

Innovation Beyond Tradition guely MEGACON, simpler it can't be


INSULATION TRANSDUCER FOR NON-GROUNDED AC NETWORKS

MCM163x

Connection

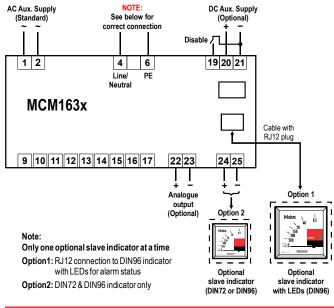

Connection

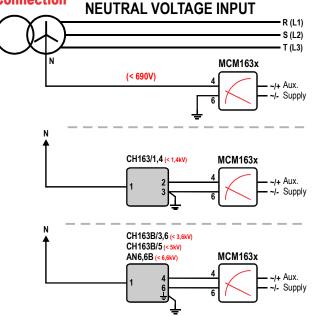

Analogue Output

MCM163F have an analogue output proportional to insulation level. (Special outputs are available on request)


Add suffix from table below to type designation to specify output required:

0/P1 0/P2	0 - 10mA 0 - 20mA	0/P6 0/P7	N/A N/A
0/P3	4-20mA	0/P8	0-10VDC
0/P4	N/A	O/P9	N/A
O/P5	N/A	O/P10	N/A


Parallelling Disable Function

MCM163x has a built-in disable function. When connecting two or more IT-networks together only one unit can be active, the other(s) must be disabled. When unit is disabled the power led will flash every 2 seconds to indicate that unit is inactive.

Use a potential free contact on terminal 19 & 20 to activate the disable function (after 2 secs). When activated the measuring input terminal 4 will be internally disconnected.

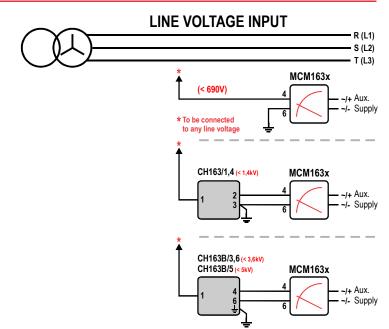

The instrument will detect earth fault on all phases independent of which phase is connected to terminal 4.

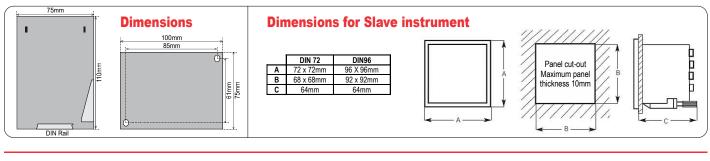

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

ORDERING EXAMPLE: Type: Aux. Supply: Network Voltage: Analogue O/P Range:

MCM163F 200-240VAC 3 6kVAC (O/P3) 4-20mA ò - 10Mohm



Norway Denmark United Kingdom



www.megacon.com

ELECTRONIC CONTROL AND INSTRUMENTATION

Innovation Beyond Tradition guely MEGACON, simpler it can't be!

Page: 3 of 3